



For

Automatic Tiles Ahmed & Yassin Terrazzo

Packing and Loading

The 1st Step

The Crate Dimensions up on to the following:

- 1-The product size.
- 2-The number of crate per container.
- 3-The quantity Sq.m per crate
- 4-The weight gross of crate

The 2nd Step

- 1-The tiles up to its size put on pallets.
- 2- Straps the tiles each raw.
- 3-Straps the tiles all rows together with pallet

The 3rd Step

- 1-the pallet arranged to be loaded.
- 2-The pallets loaded on truck or in containers.



- DAKAHLIA - EGYPT.

Suof.

Factory & Management: KM3 Meet Ghamr Zagazik Road, Meet Ghamr

Telephones: 002 050 483736 / 37 / 38 / 39 Fax: 002 050 6843740

Cairo Office: 66 Extension Ramsis 2, Nasr City - Cairo - EGYPT.

Telephones: 002 02 20808597 - 002 02 20809015 Fax: 002 02 20809015

Alexandria Office: 5 CeiroSize, Building, Gamela Abou Hred Street, El

Telephones : 002/039543430 - 002/039543434 Fax: 002039543434

Web Site: <http://www.elsoufiegypt.com> and <http://www.elsoufi.com>

